Ref. 055131



For lead-acid batteries until 100 Ah.

3 FUNCTIONS

- Test the starting capacity of the battery.
- Indicates the state (good or bad) of the battery.
- **Test the alternator voltage.** It detects if there is aproblem in the load circuit of the vehicle whichcan damaged the battery or the electronic onboard.
- -> Quick analysis results (< 10 sec.) with reading simplification thanks to "colour" codes.



(← - EN 60335-2-29

=		Battery A V CHARGING SYSTEM VEHICLE		PRINT PAPER	DIGITAL	RESULT	≡ • ** • *	TEMPERATURE COMPENSATION	cm	å kg		
6-12V	20>100Ah	•	•	12V	-	-	5/10s	15 min	-	16 x 1.8 x 30	1.5	